

Safety precautions

These precautions help you use the product safely and correctly and prevent unexpected danger or damage. Read them before use and keep this guide where users can consult it.



WARNING — Ignoring these instructions may cause serious injury or death.

- Only qualified installation or service personnel may disassemble or modify the product. Doing so may reduce performance or cause fire or electric shock.
- Do not spill water or other liquids on the product. If liquid enters it, disconnect the telephone line and power cord and contact the nearest service centre.
- If the product emits an unusual smell, sound or smoke, disconnect the telephone line and cord immediately and contact the nearest service centre.
- Do not install it in wet or humid places; this may cause fire, electric shock or product damage.



CAUTION — Ignoring these instructions may cause minor injury or product damage.

- Do not pull the telephone line excessively; performance may deteriorate or the product may fail.
- Do not install the telephone where there is strong vibration.
- Do not drop the telephone; this may cause injury or product failure.
- Keep it away from electrical or electronic equipment that produces high-frequency energy or strong electric or magnetic fields.
- Do not place heavy objects on the telephone.
- Do not install it in dusty areas; performance and service life may be reduced.

- Keep it away from direct sunlight and heating appliances.
- Do not install it in poorly ventilated places.
- Do not clean it with benzene, thinner, alcohol or acetone; printed markings may be erased.
- Install it out of children's reach to prevent injury from sharp edges or damage if dropped.



This symbol warns that danger may arise under specific conditions.

Protecting the environment through recycling



This symbol means that the telephone and other electronic accessories must not be disposed of with household waste. Do not put the telephone or battery in a rubbish bin.

Disposal of end-of-life electrical products

When purchasing a new product

If you buy a new product from a dealer and want to discard the old one, the dealer will collect it free of charge when the new product is delivered.

When disposing of it without a replacement

For large household waste such as appliances or furniture, contact your local community service centre.

This information may change without notice as the product is continuously developed and manufactured. The company accepts no liability for damage or errors arising from this material.

<https://ipecs.co.kr>

Printed in Thailand

© IPECS Co., Ltd. 2006

MMBB0094001 / ISSUE 2.0

ipecs

LKA-100F corded telephone

USER GUIDE

This product is intended for use in Korea only and must not be used in other countries.

Product enquiries: <https://ipecs.co.kr>

Service visits caused by incorrect installation may be chargeable. Read this guide carefully before use.

Before use

This guide provides operating information for the LKA-100F corded telephone.

User notice

This Class B electromagnetic-compatibility device is intended mainly for domestic use and may be used in all areas.

Check the package contents

Make sure all items are present. If anything is missing or damaged, contact the place of purchase.

- LKA-100F telephone
- Handset
- Connection adaptor
- Telephone line
- User guide

Features and functions

The LKA-100F is an electronic corded telephone with a clean design suitable for office use.


Main functions

- Three-level incoming ringer volume
- Redial
- Flash
- On-hook dialling (OHD)
- Incoming call lamp

During use

- Dial slowly and accurately.
- Keep the telephone away from direct sunlight and heaters.
- Clean it with a dry cloth. Do not use petrol, benzene or thinner because printed markings may be erased.

Telephone description

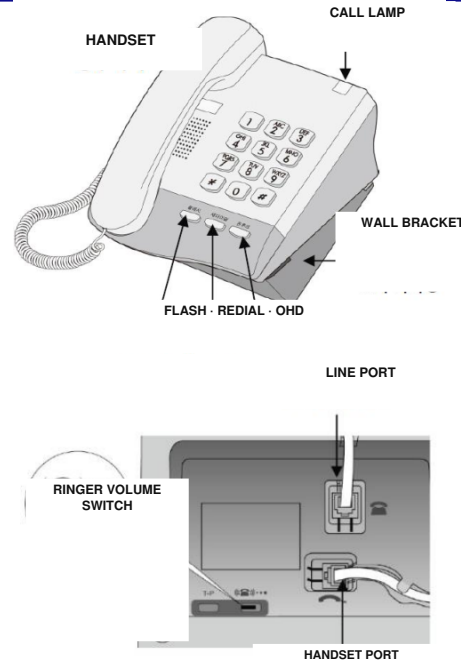

Using the functions

Making a call

- 1) Lift the handset and confirm dial tone.
- 2) Dial the required number.
- 3) Speak when the party answers.
- 4) Replace the handset when finished.

Answering a call

- 1) When the telephone rings, lift the handset and speak.
- 2) Replace the handset when the call is finished.

Incoming call lamp

When the telephone rings, the lamp on the base lights so an incoming call can be identified easily.

Incoming ringer volume

The incoming ringer has three volume levels. Use a screwdriver or similar tool to adjust the switch.



Flash (call transfer)

After subscribing to a special service from your telephone provider, use Flash to access it. If the exchange does not support the service, visit <https://ipecs.co.kr> for assistance.

Redial

Use this when the called party is busy or to call the last number again.

- 1) Lift the handset and confirm dial tone.
- 2) Press Redial.
- 3) Speak when the party answers.
- 4) Replace the handset when finished.

On-hook dialling (OHD)

On-hook means the handset remains on the telephone. OHD lets you dial without lifting it.

Using OHD

- 1) Without lifting the handset, press OHD; dial tone is heard through the speaker.
- 2) Dial the required number.
- 3) When the party answers, lift the handset and speak.
- 4) Replace it when finished.

Other use of the OHD button

During a handset call, press OHD to mute your transmission and listen only to the other party.

Releasing OHD

While OHD is active, lift the handset or press OHD again to release it.