

1024idss Quick Installation Guide

This guide explains how to install the 1024idss expansion module for 1000i Series phones. It provides 24 programmable DSS keys with LEDs. Specifications may change without notice as the product is improved.

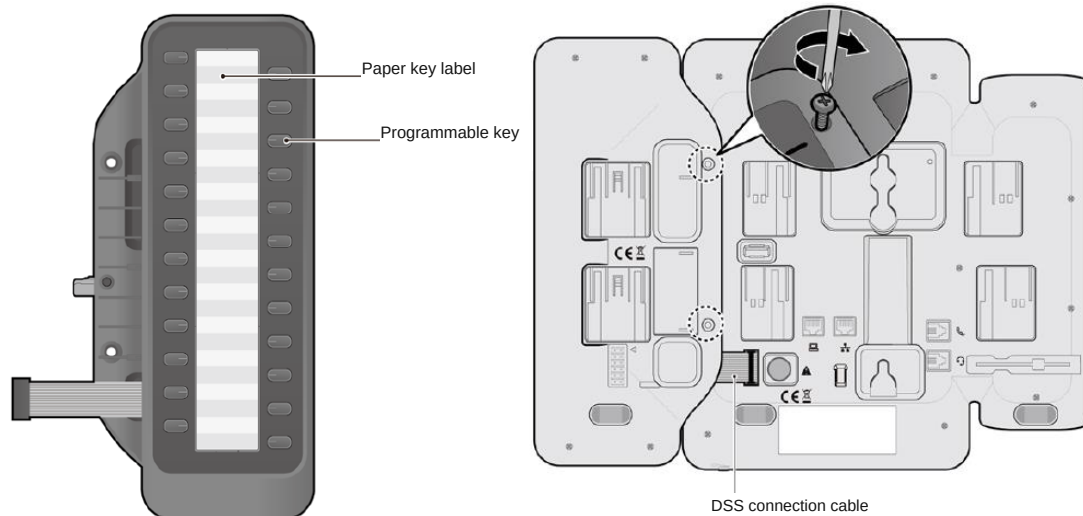


Figure 1: 1024idss

Figure 2: installing the 1024idss

PRODUCT

The 1024idss adds 24 programmable keys to compatible 1000i Series phones. The keys can be assigned in the same way as the phone's programmable keys. One 1024idss can be connected to the 1020i, 1030i, 1040i, 1050i or 1080i. It can be installed on a desk or wall. It is not compatible with the 1010i.

INSTALLATION



CAUTION: Switch off the phone before connecting or disconnecting the DSS to prevent equipment damage.

- 1) Remove the handset and phone stand to make installation easier.
- 2) Connect the cable attached to the DSS to the phone.
- 3) Align the DSS and phone as shown in Figure 2, then attach the module to the side of the phone.
- 4) Use the supplied screws to secure the phone and DSS. Do not overtighten them; the mounting points may be damaged.

ATTACHING THE DESK STAND

Choose a position where the display is easy to read and the phone is convenient to use. The stand supports two angles: 35 degrees and 50 degrees. Set the DSS and phone stands to the same angle.

- 1) Align the tabs on the DSS stand with the grooves on the rear of the DSS.

- 2) Push the stand upward until it clicks into place. Confirm that it is secure and does not wobble.



COMPLETING THE INSTALLATION

The DSS is powered by the phone.

- 1) When power is connected, the phone and DSS switch on.
- 2) The DSS LED flashes until communication with the phone is established.

WALL MOUNTING: PHONE AND DSS

- 1) Remove the stands from the phone and DSS.
- 2) Confirm that all cables are connected correctly, then attach the DSS to the phone as described above.
- 3) Mark the positions for two plastic wall anchors (not supplied). Drill two 7 mm holes, spaced vertically by 8 cm or 10 cm. Check the alignment before drilling and avoid cables or other objects behind the wall.
- 4) Insert the anchors and fit the screws (not supplied). Leave each screw head approximately 2.5 mm from the wall and make sure the screws are secure.
- 5) Place the two keyhole slots on the base of the phone over the screws. Slide the assembly downward to secure it. If necessary, adjust the screw depth until the phone is stable.
- 6) To prevent the handset from falling, remove its retaining tab, rotate it 180 degrees and refit it in the upper slot. Replace the handset.
- 7) Connect and arrange all cables.

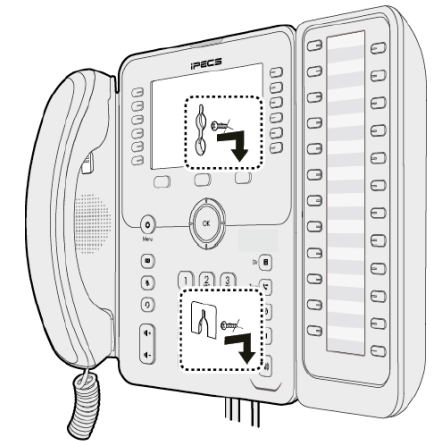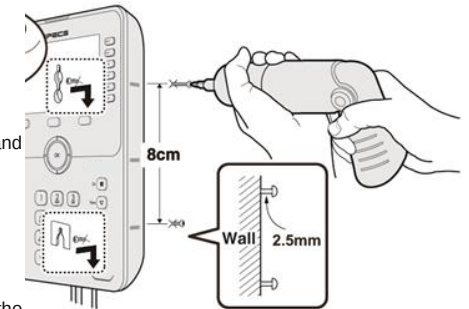

For information about programming the DSS keys, refer to the appropriate 1000i Series user guide at <https://www.ipecs.co.kr/>.



Published in Korea
<https://www.ipecs.co.kr/>
© IPECS Co., Ltd. 2019