

1000i Series Quick Installation Guide

Before starting

This quick installation guide provides information to install the 1000i series. For more information, visit <https://ipecs.co.kr>
Please refer to the 1000i series user manual.

User information

This device is a household (class B) electromagnetic wave compatibility device and is intended primarily for home use, and can be used in all areas.

Package contents

Please check that all contents are included and if there is a problem, contact the store where you purchased the product.

Telephone, phone stand, handset, telephone line cord, 1.5m CAT5 LAN cable, speed dial label (1020i only)

Installation

It is recommended to place the phone on a desk or table that is easy to connect to a power source and has a flat surface.

Connecting the phone

The phone can be powered via an AC adapter or PoE.

- PoE Class 2: 1010i, 1020i, 1030i
- PoE Class 3: 1040i, 1050i

Network and power

If you want to connect the power using an AC adapter, purchase and use a genuine adapter approved by our company. PoE
To use it, the connected LAN must support PoE.

! WARNING: When connecting power, PoE and AC adapter cannot be used at the same time.

Connecting the handset and headset

- Connect one end (the straight, short end) of the modular jack on the telephone line cord to the handset.
- Connect the straight end of the modular jack to the handset port on the phone back, as shown in Figure 1.
Connect to the connector.
- (Optional installation) Connect the headset modular jack to the headset connector indicated on the back of the phone as shown in Figure 1.

Note: See "Information on using the headset" before connecting it.

- Place the handset and headset cables in the cable groove to prevent damage or disconnection.
Keep the cables neatly arranged.
- 1040i/1050i supports USB headsets. When a USB headset is connected, the headset function is
The phone uses the USB device as its active headset.

Note: A USB headset connected during a call is available from the next call.

Headset information

Our product allows you to make calls easily and conveniently using a headset or headset amplifier. There are various products,
We have posted a list of headsets on our website that can guarantee optimal call quality and are suitable for our products, so be sure to refer to them.
Please use it. Deterioration in call quality due to use of other products is not guaranteed. Due to addition of new headset
Changes may be posted from time to time.

Network and power

- Connect one end of the LAN cable included in the package to the LAN port indicated on the back of the phone as shown in Figure 1.
- Connect the other end of the LAN cable to the Ethernet port. (However, do not install the LAN cable by extending it outside the building.
- For phone-to-computer Ethernet, connect the LAN cable as shown in Figure 1.
Connect to computer port.
- Insert the other end of the LAN cable into the LAN port on the back of the computer.

Note: If you are powered by PoE, skip the following installation steps 5 and 6.

- Connect the AC power adapter (sold separately) to the adapter input shown in Figure 1.
Secure the adapter wire in the cable groove.
- The phone will work when you connect the AC power adapter to a power outlet on the wal.

Installing a phone stand

Choose a position where the screen is easy to read. The stand supports two angles: 35° or 50°.

- Align both stand tabs with the phone-back connection grooves.
- Push the stand upward until you hear a click, and confirm that it is secure.

Wall mounting

The 1000i series phones can be wall mounted as needed.

Caution: If you want to install the phone on a wal, remove the phone stand and make sure the CAT5 LAN cable does not protrude.
Move the sleeve back.

- Choose a level, dry wall near a power outlet.
- Make two 7mm holes vertically at 8cm or 10cm intervals for inserting plastic anchors (not included).
Mark it so it fals and pierce it.

NOTE: Be careful not to puncture objects behind the wal.

- Insert the anchor into the hole and tighten the screw (not included) firmly, approximately 2.5mm away from the wal.
Tighten.
- Align the two key holes on the botom of the phone with the screws and lower them to securely secure them.

- Use your thumbnail to pull the handset hanger tab out of the groove, turn it 180°, and insert it as shown in Figure 2.
- Connect all wires.

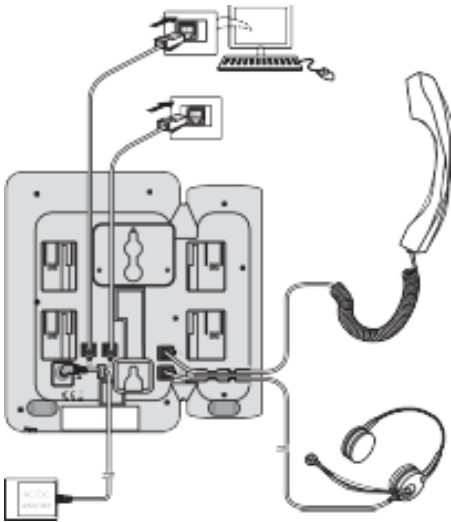


Figure 1: 1000i Series connection

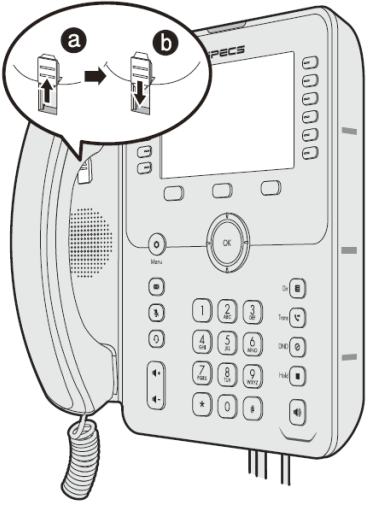


Figure 2: wall mounting

Protocol selection

When installing the 1000i series for the first time, a screen for selecting either IPKTS or SIP protocols appears. Depending on the purpose of use,
Select the protocol required for the installation.

If you select iPKTS, the "Global Provisioning" screen appears. Press the "NO" soft key.
The protocol selection is complete.

Note: "Global Provisioning" remains visible for about 10 seconds, then "NO" is selected automatically.

This document may change without notice as the product continues to be developed and improved.
ipecs accepts no liability for errors or damage arising from use of this document.



Published in Korea
<https://www.ipecs.co.kr/>
IPECS Co., Ltd. 2019