

1000i Series Quick Installation Guide

Before starting

About this guide

This guide briefly explains how to install the 1010i, 1020i, 1030i, 1040i and 1050i phones. For more information, contact Inspur.

Unpacking

Package contents:

- 1000i phone, stand, handset, handset cord and 1.5 m CAT5E network cable
- Guide and number label (1020i)

Installation

Preparation

Place the phone on a stable, level surface such as a desk.

Connecting the phone

The phone can be powered by an AC power adapter or Power over Ethernet (PoE).

- PoE Class 2: 1010i, 1020i and 1030i
- PoE Class 3: 1040i and 1050i

Caution: Use either the AC adapter or PoE. Do not use both at the same time.


Handset and headset

- 1) Connect the short straight end of the handset cord to the handset.
- 2) Connect the long straight end to the handset jack on the phone.
- 3) Connect the headset to the headset jack on the phone.
- 4) Route the cords through the cable channels to avoid damage.
- 5) The 1040i and 1050i support USB headsets.

Note: If a USB headset is connected during a call, it takes effect on the next call. USB and EHSA headsets cannot be used together; connect only one.

Network and power

- 1) Connect the phone LAN port to the network switch with an RJ-45 cable.
- 2) Optional: connect the phone PC port to the computer network port with an RJ-45 cable.

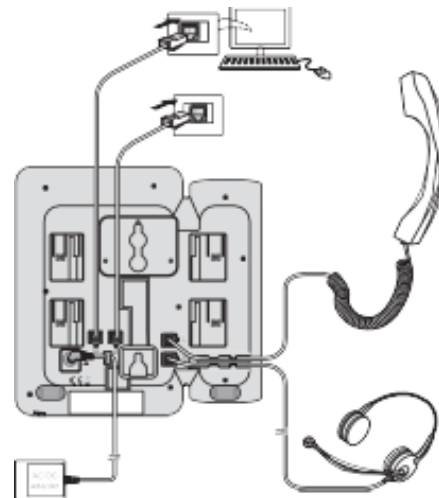

Note: If the phone is powered by PoE, skip the following steps.

- 3) Optional: connect an AC power adapter (not supplied) to the phone AC jack.
- 4) Optional: plug the adapter into a nearby AC outlet. The phone starts.

Attaching the stand


The stand can be fitted at 35° or 50°, according to preference.

- 1) Select the desired angle.
- 2) Align the stand tabs with the slots on the back of the phone.
- 3) Push the stand into the slots until it is secure.

Wall mounting

The phone can be wall-mounted if required.

- 1) Mark and drill two 7 mm holes for plastic wall anchors (tools, anchors and screws not supplied).
- 2) Fit the anchors and screws, leaving about 2.5 mm exposed.
- 3) Align the rear keyholes with the screw heads and secure the phone.
- 4) Remove and reverse the handset hook so it retains the handset.

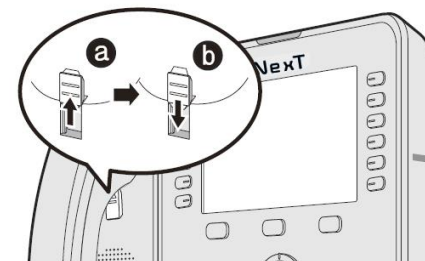

- 5) Complete all cable connections.

This document may be revised without notice as design and manufacturing evolve. Inspur accepts no responsibility for errors or damage arising from use of this document.

inspur 浪潮

<https://www.inextuc.com/>

For more information, contact Shandong Inspur Communication Equipment Co., Ltd.